

# **972A/972B**

## Temperature Humidity Meter

### Users Manual

## LIMITED WARRANTY AND LIMITATION OF LIABILITY

Each Fluke product is warranted to be free from defects in material and workmanship under normal use and service. The warranty period is one year and begins on the date of shipment. Parts, product repairs, and services are warranted for 90 days. This warranty extends only to the original buyer or end-user customer of a Fluke authorized reseller, and does not apply to fuses, disposable batteries, or to any product which, in Fluke's opinion, has been misused, altered, neglected, contaminated, or damaged by accident or abnormal conditions of operation or handling. Fluke warrants that software will operate substantially in accordance with its functional specifications for 90 days and that it has been properly recorded on non-defective media. Fluke does not warrant that software will be error free or operate without interruption.

Fluke authorized resellers shall extend this warranty on new and unused products to end-user customers only but have no authority to extend a greater or different warranty on behalf of Fluke. Warranty support is available only if product is purchased through a Fluke authorized sales outlet or Buyer has paid the applicable international price. Fluke reserves the right to invoice Buyer for importation costs of repair/replacement parts when product purchased in one country is submitted for repair in another country. Fluke's warranty obligation is limited, at Fluke's option, to refund of the purchase price, free of charge repair, or replacement of a defective product which is returned to a Fluke authorized service center within the warranty period.

To obtain warranty service, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that service center, with a description of the difficulty, postage and insurance prepaid (FOB Destination). Fluke assumes no risk for damage in transit. Following warranty repair, the product will be returned to Buyer, transportation prepaid (FOB Destination). If Fluke determines that failure was caused by neglect, misuse, contamination, alteration, accident, or abnormal condition of operation or handling, including overvoltage failures caused by use outside the product's specified rating, or normal wear and tear of mechanical components, Fluke will provide an estimate of repair costs and obtain authorization before commencing the work. Following repair, the product will be returned to the Buyer transportation prepaid and the Buyer will be billed for the repair and return transportation charges (FOB Shipping Point).

THIS WARRANTY IS BUYER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. FLUKE SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, ARISING FROM ANY CAUSE OR THEORY.

Since some countries or states do not allow limitation of the term of an implied warranty, or exclusion or limitation of incidental or consequential damages, the limitations and exclusions of this warranty may not apply to every buyer. If any provision of this Warranty is held invalid or unenforceable by a court or other decision-maker of competent jurisdiction, such holding will not affect the validity or enforceability of any other provision.

11/99

Fluke Corporation  
P.O. Box 9090  
Everett, WA 98206-9090  
U.S.A.

Fluke Beijing Service Center  
Rm301, 3/F., Building 7  
No. 6, Jiuxianqiao Road, Chaoyang  
Beijing 100015, P.R.C.

# Table of Contents

Title	Page
Introduction .....	1
How to Contact Fluke.....	1
Safety Information.....	1
Product Familiarization .....	2
Standard Packaging.....	2
Model Comparison Table .....	3
Operation Features .....	3
Components and Controls .....	3
Screen .....	7
Use the Meter .....	9
Turn On/Off the Meter .....	9
View the Current Measurements.....	9
Wet Bulb and Dew Point Temperatures (972B Only) .....	9
Min/Max/Ave Values .....	10
Store and Recall Historical Data (972B only).....	10
Save Measurement Data .....	10
Recall Historical Data .....	11
Clear Historical Data .....	12
Use External Sensor .....	12
Maintenance .....	13
Clean the Case .....	13
Battery Replacement .....	13
Product Disposal.....	14
Specifications.....	15
General Specifications .....	15
Detailed Specifications.....	16



## ***Introduction***

The 972A/972B Temperature Humidity Meter (the "Product" or "Meter") is a battery-powered temperature and relative humidity measurement meter.

The Meter features:

- Temperature and humidity measurement
- Optional built-in and external sensors.
- 99 sets of stored data (972B only)
- Dew point and wet bulb temperature (972B only)

## ***How to Contact Fluke***

Fluke Corporation operates worldwide. For local contact information, go to our website: [cn.fluke.com](http://cn.fluke.com) (Chinese) or [www.fluke.com](http://www.fluke.com) (English)

To register your product, view, print, or download the latest manual or manual supplement, go to our website.

Fluke Corporation  
P.O. Box 9090  
Everett, WA 98206-9090

+1-425-446-5500

[fluke-info@fluke.com](mailto:fluke-info@fluke.com)

## ***Safety Information***

General Safety Information is in the printed Safety Information document that ships with the Product and at [www.fluke.com](http://www.fluke.com). More specific safety information is listed where applicable.

A **Warning** identifies conditions and procedures that are dangerous to the user. A **Caution** identifies conditions and procedures that can cause damage to the Product or the equipment under test.

## Product Familiarization

The manual explains features for multiple models. Because models have different features, not all of the information in the manual may apply to your Product. Understand the features of your Meter by using [Table 3](#).

## Standard Packaging

To prevent damage during shipment, the Product is shipped in a specially designed package. Please check the Product carefully and inform the carrier of any damage.

When unpacking the Product, please check the standard equipment listed in [Table 2](#) and other ordered parts listed on the packing list. If there is any shortage of parts, please inform the nearest Fluke Technical Service Center or the Service Center in place of purchase.

If you need to reship the Product, please use the original package. If the original package is not available, a new package can be ordered from Fluke according to the Product's model.

[Figure 1](#) and [Table 2](#) list the standard items that comes with the Product.

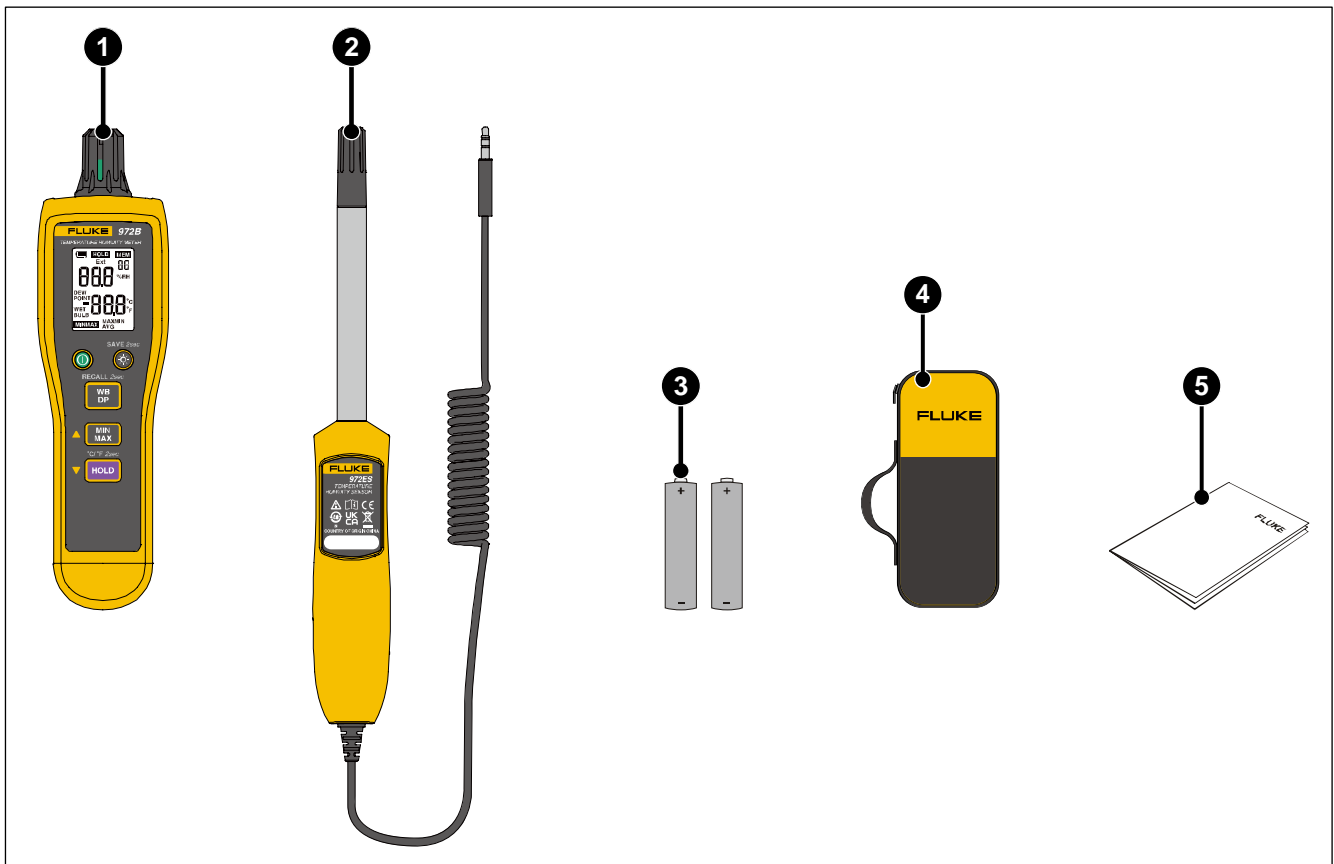


Figure 1. Standard equipment

**Table 1. Standard equipment**

Item	Description	Part Number	972A	972B
①	The Temperature Humidity Meter		1	1
②	External temperature/humidity sensor	972 ES		1
③	AAA type battery (installed)		2	2
④	Soft case		1	1
⑤	Documentation, including a Quick Reference Guide and a Safety Information	5577512 5577558	1	1

### **Model Comparison Table**

*Table 2* lists functional comparison of different models.

**Table 2. Model Comparison Table**

Features	972A	972B
Built-in sensor	√	√
External sensor		√
Temperature measurement	√	√
Humidity measurement	√	√
Dew point temperature measurement		√
Wet bulb temperature measurement		√
Data storage		√

### **Operation Features**

This section describes the operation panel of the Product and the location and function of the display screen. Please read this section carefully before operating the Product.

The contents of this manual are based on the Model 972B. As different models have different features, some of the information in this manual may not be applicable to your product.

### **Components and Controls**

The components and controls of the Product are shown in *Figure 2*, and *Table 3* lists the feature and function of each component.

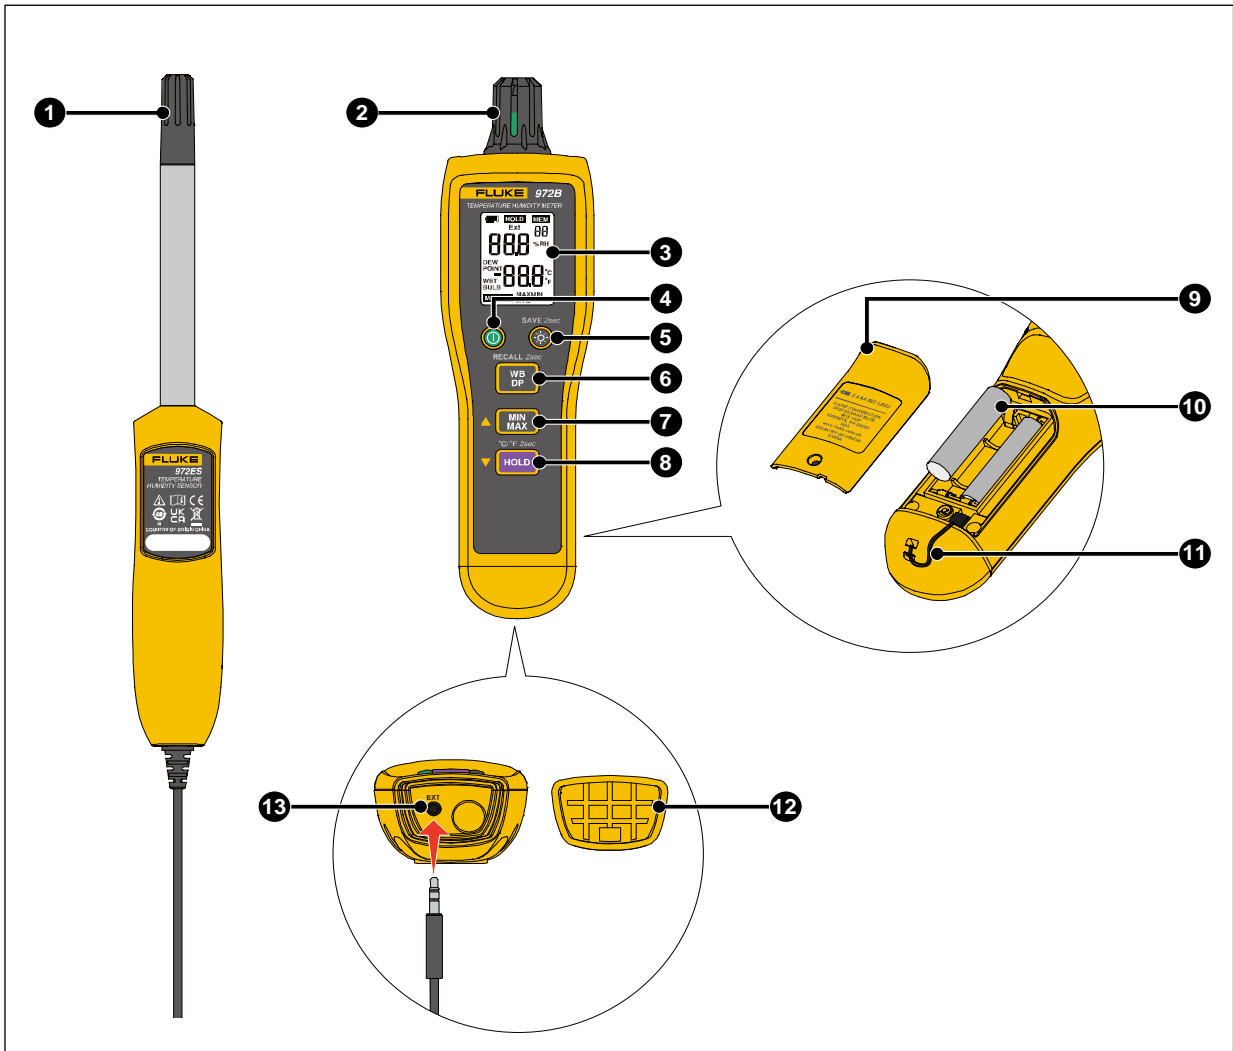













Figure 2. Product Features

Table 3. Product Features

No.	Item	Description
1	External sensor	External temperature/humidity sensor (standard with 972B). See <a href="#">Use External Sensor</a> for details.
2	Built-in sensor	Built-in temperature and humidity sensors.
3	LCD display	See <a href="#">Screen</a> for details.
4	Power button	 <p>Turn on or off the Meter.</p> <ul style="list-style-type: none"> <li>- <b>Power on:</b> Push and hold for 2 seconds to turn the Meter on. See <a href="#">Turn On/Off the Meter</a> for details.</li> <li>- <b>Power off:</b> Push briefly to turn the Meter off.</li> </ul> <p>See <a href="#">Turn On/Off the Meter</a> for details.</p>




No.	Item	Description
5	Backlight / Save button	 <p>The Meter has a backlight for easy reading of the screen in dim environments.</p> <p>Push to turn on or off the backlight function during measuring.</p> <p style="text-align: center;"><i>Note</i></p> <p style="text-align: center;"><i>If users do not perform any operation within 5 minutes, the backlight will automatically turn off to save battery power.</i></p> <p><small>SAVE 2sec</small></p>  <p>(972B only)</p> <p>Press and hold for at least 2 seconds during measurement or Hold mode to save the current measurement data to the memory.</p> <p>See <a href="#">Screen</a> and <a href="#">Save Measurement Data</a> for details.</p>
6	Temperature / Humidity button or Wet bulb/dew point button	 <p><b>Temperature/Humidity switch button (972A only)</b></p> <p>The Meter shows the current measured temperature and humidity by default after it is powered on, and each time the button is pressed briefly, the Meter steps through these screens:</p> <ul style="list-style-type: none"> <li>- Temperature only</li> <li>- Humidity only</li> <li>- Both temperature and humidity</li> </ul>  <p><b>Wet bulb / dew point temperature button (972B only)</b></p> <p>Each time the button is pressed briefly during measuring or recalling measurement data, the temperature display area on the screen steps through:</p> <ul style="list-style-type: none"> <li>- Both humidity and wet bulb temperature</li> <li>- Both humidity and dew point temperature</li> <li>- Both temperature and humidity</li> </ul> <p>See <a href="#">Screen</a> and <a href="#">Wet Bulb and Dew Point</a> for details.</p> <p><small>RECALL 2sec</small></p>  <p>(972B only)</p> <p>Press and hold for at least 2 seconds during measurement or hold mode to recall the historical data stored in the Meter.</p> <p>See <a href="#">Screen</a> and <a href="#">Recall</a> Historical Data for details.</p>

No.	Item	Description
7	MAX/MIN button	 <p>When this button is pushed during measurement, the MAX/MIN temperature symbol <b>MINMAX</b> shows on the Meter's screen, indicating that the Meter is in the MAX/MIN/AVE calculation mode. The Meter starts calculating the MAX/MIN temperature and humidity values at the same time.</p> <p>Each time the button is pushed, the screen displays alternately the data obtained from the start of the calculation up to now:</p> <ul style="list-style-type: none"> <li>- <b>MAX</b>: Maximum temperature and humidity value. Maximum dew point and wet bulb temperature (972B only).</li> <li>- <b>MIN</b>: Minimum temperature and humidity value. Minimum dew point and wet bulb temperature (972B only).</li> <li>- <b>AVG</b>: Average temperature and humidity value. Average dew point and wet bulb temperature (972B only).</li> </ul> <p>To exit the MAX/MIN/AVE calculation mode, press and hold for 2 seconds. See <a href="#">Screen</a> and <a href="#">Min/Max/Ave Values</a> for details.</p>  <p><b>Up/down arrow keys</b></p> <p>In Recall mode, you can use the up/down arrow keys to select the saved data you want to view.</p> <ul style="list-style-type: none"> <li>- <b>Short press</b>: Increase or decrease the storage location number by 1.</li> <li>- <b>Long press</b>: The storage location number increases or decreases rapidly.</li> </ul> <p>See <a href="#">Screen</a> and <a href="#">Recall Historical Data</a> for details.</p>
8	Hold key/unit selection key	 <p>During measurement, briefly push to freeze the current measured temperature and humidity values on the screen, while the Hold symbol <b>HOLD</b> is shown.</p> <p>Push the button again to exit Hold mode, The Hold symbol <b>HOLD</b> on the screen disappears, and the measured temperature and humidity values are restored to be updated.</p> <p><small>°C/°F 2sec</small></p>  <p>The Meter can display temperature values in: °C and °F.</p> <p>During measurement or Hold mode, push and hold the button for 2 seconds to select °C or °F alternatively.</p> <p style="text-align: center;"><i>Note</i></p> <p style="text-align: center;"><i>The temperature is always shown in °C by default each time the Meter is turned on.</i></p>  <p><b>Up/down arrow keys</b></p>
9	Battery Compartment	See <a href="#">Battery Replacement</a> for more details.

No.	Item	Description
10	Batteries	2 AAA batteries, installed
11	Protective cover lanyard	The lanyard can effectively prevent losing the interface protective cover. One end of the lanyard is tied to a fixed point on the protective cover, and the other end with a small clip that snaps into a slot inside the battery compartment is threaded through a small groove in the battery compartment cover.
12	Protective cover for external sensor jack	See <a href="#">Use External Sensor</a> for more details.
13	External sensor jack	See <a href="#">Use External Sensor</a> for more details.

**Screen**

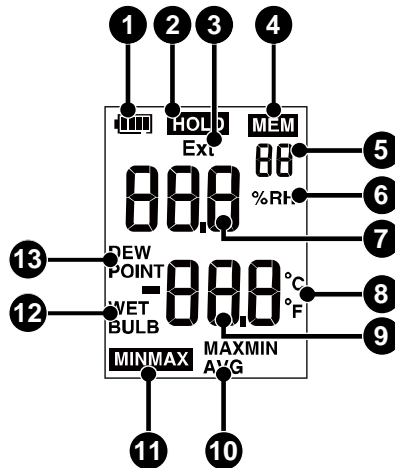

**Figure 3. The Meter Screen**

**Table 4. The Meter Screen**



No.	Item	Description
1		<b>Battery level</b>
2	<b>HOLD</b>	<b>Hold</b> Indicate that the screen data is frozen in hold mode.
3	Ext	<b>External sensor</b> Indicated an external sensor is connected. The symbol is not shown on the screen when no external sensor is connected. See <a href="#">Use External Sensor</a> for more details.

No.	Item	Description
4	MEM	<p><b>Memory</b></p> <p>When the symbol flashes on the screen, it indicates that the Meter is in Recall mode.</p> <p>See <a href="#">Recall Historical Data</a> for details.</p>
5	88	<p><b>Storage location number</b></p> <p>The storage locations are numbered 01 to 99.</p> <ul style="list-style-type: none"> <li>- In Measurement mode, this number indicates the storage location to be used.</li> <li>- In Recall mode, this number indicates the storage location of the currently viewed data.</li> </ul> <p>See <a href="#">Save Measurement Data</a> and <a href="#">Recall Historical Data</a> for more details.</p>
6	88.8	<p><b>Relative humidity</b></p> <p>Current or historical values, minimum, maximum, or average values show depending on the current selection.</p> <p>See <a href="#">Recall Historical Data</a> for more details.</p>
7	-88.8	<p><b>Temperature</b></p> <p>Current or historical values, minimum, maximum, or average values show depending on the current selection.</p> <p>See <a href="#">Recall Historical Data</a> for more details.</p>
9	DEW POINT	<p><b>Dew point temperature symbol</b></p> <p>This symbol indicates that the dew point temperature calculated by the Meter is currently shown.</p> <p>See <a href="#">Wet Bulb and Dew Point Temperatures</a> for more details.</p>
10	WET BULB	<p><b>Wet bulb temperature symbol</b></p> <p>This symbol indicates that the wet bulb temperature calculated by the Meter is currently shown.</p> <p>See <a href="#">Wet Bulb and Dew Point Temperatures</a> for more details.</p>
11	MINMAX	<p><b>MIN/MAX function symbol</b></p> <p>Indicate that the Meter is currently in the MAX/MIN/AVE calculation mode.</p> <p>See <a href="#">Min/Max/Ave Values</a> for details.</p>
12	MAX / MIN / AVG	<p><b>MAX/MIN/AVE symbol</b></p> <p>When MAX, MIN or AVG is shows, it indicates that the screen shows the maximum, minimum or average temperature and humidity obtained since the start of the calculation.</p> <p>See section <a href="#">Min/Max/Ave Values</a> for details.</p>
13	°C / °F	<p><b>Temperature unit symbol</b></p>
14	%RH	<p><b>Relative humidity symbol</b></p>

## Use the Meter

### Turn On/Off the Meter

Use the Power button  on the front panel to turn the Meter on and off.

- **Power on:** Push and hold  for 2 seconds, release the button when the screen lights up.
- **Power off:** Briefly push  to turn the Meter off.

After powering on and a short self-test, the Meter will automatically display the current temperature and RH measurement.

#### Note

*The Meter will automatically shut down if there is no activity for 20 minutes.*

### View the Current Measurements

The Meter measures the current temperature and humidity immediately after power on, and the default screen is shown below:

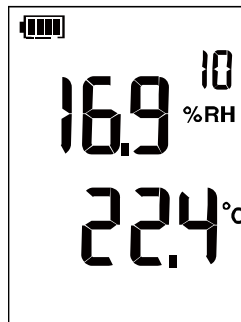



Figure 4. Default Measurement Screen

During measurement, users can select and view different current measurements via buttons on the front panel.

#### Caution

**When moving from one temperature/humidity extreme to another, allow time for the Meter to stabilize.**

### Wet Bulb and Dew Point Temperatures (972B Only)

Each time you push  during measurement, the Meter will cycle through these screens:

- **Wet bulb temperature**,  $\text{WET}_{\text{BULB}}$  shows on the screen, as shown on the left in [Figure 5](#).
- **Dew point temperature**,  $\text{DEW}_{\text{POINT}}$  shows on the screen, as shown on the right in [Figure 5](#).
- Ambient temperature measurement screen

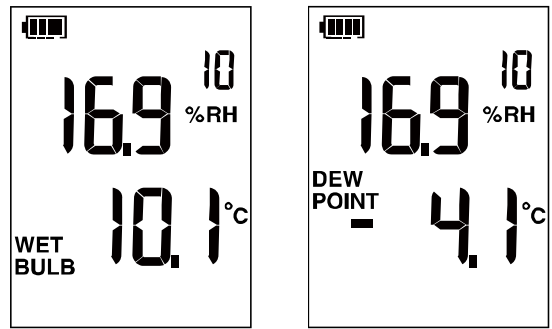


Figure 5. Wet bulb and dew point temperature

### Min/Max/Ave Values

Each time you push **MIN MAX** during measurement, the Meter's screen will show the MIN/MAX temperature symbol **MINMAX** and cycle through these screens:

- The maximum temperature, **MAX** shows on the screen, as shown on the left in [Figure 6](#).
- The minimum temperature, **MIN** shows on the screen, as shown in the middle in [Figure 6](#).
- The average temperature, **AVG** shows on the screen, as shown on the right in [Figure 6](#).



Figure 6. MIN/MAX/AVE Temperature

To return to the normal display, push and hold **MIN MAX** for 2 seconds.

### Store and Recall Historical Data (972B only)

The Meter can save up to 99 sets of measurement data and can recall any data at any time.

### Save Measurement Data

During measurement, to save the current measured value:

1. Push and hold **SAVE 2sec** for at least 2 seconds.
2. Release **SAVE 2sec** when the number of the storage location increases by 1, as shown in [Figure 7](#).

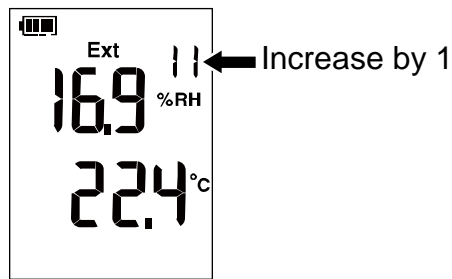


Figure 7. Save Measurement Data

*Note*

*If all 99 storage locations already have data saved, the system automatically overwrites the data stored in location 01 and continues to increase the storage location number.*

**Recall Historical Data**

During measurement, to recall the historical data:

1. Push and hold RECALL 2sec **WB DP** for at least 2 seconds.
2. Release RECALL 2sec **WB DP** when **MEM** flashes in the upper right corner of the screen, as shown in [Figure 8](#).
3. Use the up arrow key **▲ MIN MAX** and/or down arrow key **▼ HOLD** to select the storage location you want to view to see the corresponding historical data.

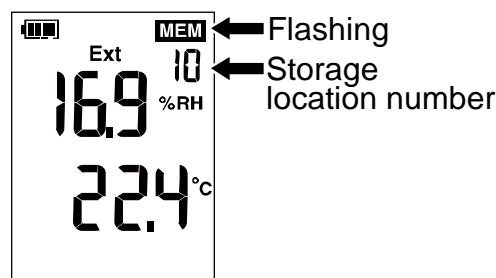



Figure 8. Recall Historical Data

4. To exit the Recall mode, push and hold RECALL 2sec **WB DP** for at least 2 seconds and the screen will return to the environmental measurement screen.

*Note*

*In the Recall screen, you can also use **WB DP** to view the wet bulb/dew point temperature saved at the current storage location, as well as, use **MIN MAX** to view the minimum, maximum and average temperature values saved.*

### Clear Historical Data

To clear all data saved in the Meter, push and hold  and  simultaneously for at least 5 seconds until the storage location number is 01.

#### Caution

**This procedure will erase all the data saved in the Meter and cannot be recovered, so please be careful.**

### Use External Sensor

Users can use an external sensor to extend the temperature measuring range of the Meter.

To connect an external sensor:

1. Remove the protective cover of the external sensor jack.
2. Insert the 3.5 mm plug on the end of the external sensor cable into the jack marked **EXT**.
3. If the Meter is off, refer to [Turn On/Off the Meter](#) to turn the Meter on.
4. Confirm that the external sensor symbol **Ext** appears on the Meter's screen. See **3** in [Figure 9](#).

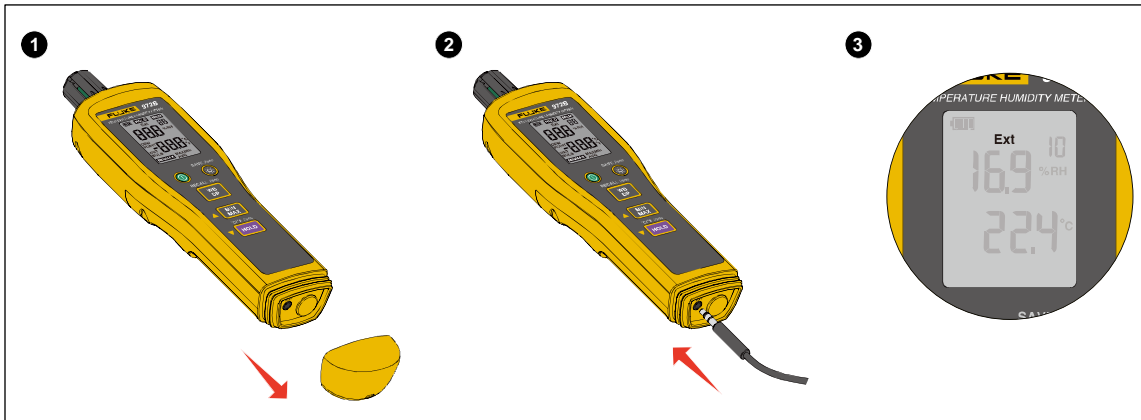


Figure 9. Connect an External Sensor



## Maintenance

There are no parts requiring for users to repair and maintain inside the Product, and no special maintenance is needed, only daily cleaning is required.

### Clean the Case

Clean the case with a damp cloth and a weak soap solution.

#### Caution

**Do not use abrasives, isopropyl alcohol, or solvents to clean the case for avoiding damaging the Product.**

**If the exposed sensor is in direct contact with the abrasives, isopropyl alcohol or solvents, the sensor will be damaged and the Meter can not be used.**

### Battery Replacement

When the battery indicator on the screen shows low power, replace the batteries promptly.

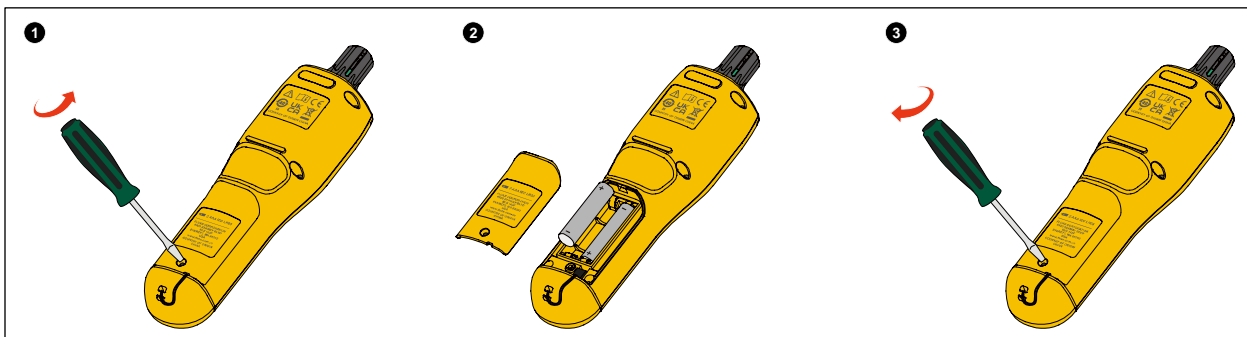


Figure 10. Battery Replacement

To replace batteries:

1. Turn the Meter off and place it face down on a firm, flat table. Use a Phillips screwdriver to loosen the screws securing the battery compartment cover, and then remove the cover.
2. Remove the old batteries and install new batteries. Please note the polarity mark on the bottom of the battery compartment.
3. Reinstall and secure the battery compartment cover in reverse order.

#### Caution

**Do not incinerate the Product and/or the battery.**

## ***Product Disposal***

Dispose of the Product in a professional and environmentally appropriate manner:

- Delete personal data on the Product before disposal.
- Remove batteries that are not integrated into the electrical system before disposal and dispose of batteries separately.
- If this Product has an integral battery, put the entire Product in the electrical waste.

## Specifications

### General Specifications

	972A	972B	972 ES
<b>Temperature</b>			
Operating	-30 °C to 70 °C		-40 °C to 70 °C
Storage	-30 °C to 70 °C, <80 % RH (without battery)		-40 °C to 70 °C, <80 %RH
<b>Altitude</b>			
Operating	2000 m		
Storage	12 000 m		
<b>Relative Humidity</b>			
Operating	0 % RH to 99 % RH		
Storage	<80 % RH		
<b>Power Supply</b>			
Battery Type	2 AAA Batteries		—
Battery Life	1000 hours for continuous operating, backlight off		—
<b>Safety</b>	IEC61010-1, Pollution Degree 2		
<b>Dimensions (H x W x D)</b>	211 mm x 58 mm x 40 mm		264 mm x 33 mm x 28 mm
<b>Weight</b>	172 g (body)		127 g
<b>Electromagnetic Environment (EMC)</b>			
<p>International IEC 61326-1: Portable, Electromagnetic Environment; IEC 61326-2-2; CISPR 11: Group 1; Class A</p> <p><i>Group 1: Equipment intentionally generates and/or uses conductive-coupled RF energy, which is necessary for its internal operation.</i></p> <p><i>Class A: Equipment is suitable for use in all establishments other than domestic and those directly connected to a low-voltage power supply network that supplies buildings used for domestic purposes. There may be potential difficulties in ensuring electromagnetic compatibility in other environments due to conducted and radiated disturbances.</i></p> <p><i>Caution: This equipment is not intended for use in residential environments and may not provide adequate protection to radio reception in such environments.</i></p> <p>Korea (KCC) Class A Equipment (Industrial Broadcasting &amp; Communication Equipment)</p> <p><i>Class A: Equipment meets requirements for industrial electromagnetic wave equipment and the seller or user should take notice of it. This equipment is intended for use in business environments and not to be used in homes.</i></p>			
<b>IP Rating</b>	IEC 60529: IP30, non-operating		

## Detailed Specifications

	<b>972A</b>	<b>972B</b>	<b>972 ES</b>
<b>Sensor Type</b>	Built-in	Built-in + External	External
<b>Temperature Measurement Range</b>	-30.0 °C to 70.0 °C	-30.0 °C to 70.0 °C (built-in sensor) -40.0 °C to 100 °C (external sensor)	-40.0 °C to 100 °C
<b>Temperature Accuracy</b>	±0.4 °C	Built-in Sensor ±0.4 °C (-30 °C to 70 °C) External Sensor: ± 0.4 °C (-40 °C to 90 °C) ±0.5 °C (90 °C to 100 °C)	±0.4 °C (-40 °C to 90 °C) ±0.5 °C (90 °C to 100 °C)
<b>Temperature Resolution</b>	0.1 °C	0.1 °C	0.1 °C
<b>Dew Point Temperature</b>			
Range	N/A	-40.0 °C to 100 °C	--
Resolution	N/A	0.1 °C	--
<b>Wet Bulb Temperature</b>			
Range	N/A	-20.0 °C to 60.0 °C	--
Resolution	N/A	0.1 °C	--
<b>Humidity</b>			
Range	0% to 99.9% RH		
Accuracy	±3 % RH (20 % RH to 80 % RH @ 25 °C) ±5 % RH (<20 % RH, >80 % RH @ 25 °C)		
Resolution	0.1% RH		
<b>Data Storage</b>	N/A	Yes. Up to 99 sets	--
<b>Display</b>	2-line LCD display, with backlight		None
<b>Auto-off</b>	Automatically turns off after 20 minutes of inactivity		—